




SPARE PARTS LIST

LAWN MOWER; ELECTRIC
EASIGLIDE 300, 970483001,
970483031, 970483035

2020-11

PRODUCT COMPLETE

EASIGLIDE 300 970483001, 970483031, 970483035, 2020-11

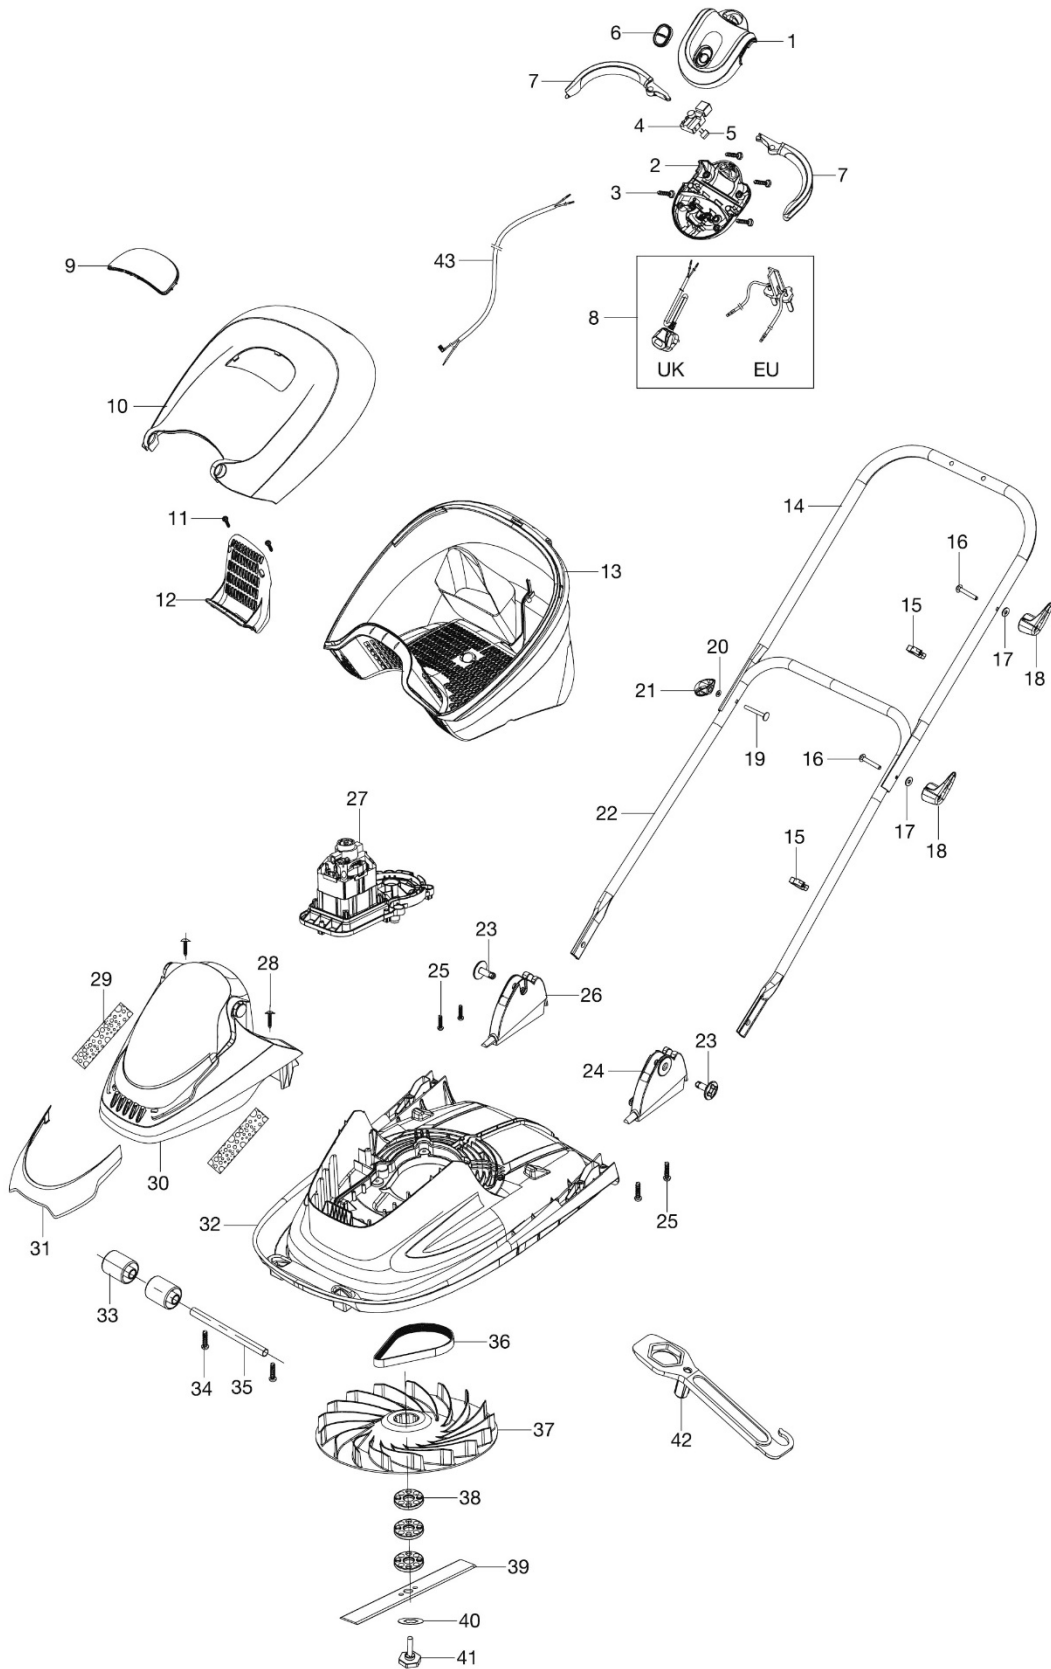

PRODUCT COMPLETE

EASIGLIDE 300 970483001, 970483031, 970483035, 2020-11

Ref	Part No	Description	Remark	QTY KIT
1, 2	529 62 70-01	Switchbox		1
3	577 29 83-01	Screws		6
4	513 12 16-00	Switch		1
5	522 72 09-02	Capacitor		1
6	599 83 65-01	Start Button		1
7	599 84 99-01	Levers		2
8	512 80 31-05	Mains Cable		1
9	529 62 93-01	Lid Insert (orange)		1
10	529 62 92-01	Grass Box Lid		1
11 – 13	529 62 91-01	Grass Box		1
15	577 29 84-01	Cable Clips		2
16 – 18	599 83 63-01	Cable Hook Kit		1
19 – 21	599 83 54-01	Wing Knob Kit		1
23	529 62 75-01	Fixing Pin Kit		2
24- 26	529 62 76-01	Handle Bracket Kit		1
28, 30, 31	529 62 89-01	Motor Cowl Kit		1
29	529 62 78-01	Air Filter Kit		2
33 – 35	529 62 83-01	Roller Kit		1
36	529 62 84-01	Belt		1
37	529 62 86-01	Impeller		1
38	529 36 32-90	Washers		3
39	529 37 05-90	Blade 30 cm (FLY 094)		1
40, 41	529 62 87-01	Blade Bolt Kit		1
42	529 62 88-01	Spanner		1
43	529 63 22-01	Power Cable		1